


# EZ-ZONE<sup>®</sup> PM to B&B Converter Model ULINX<sup>™</sup> USOPTL4 or USPTL4 USB to RS-485 Adapter using Standard Bus



USB Port

PC Software Protocol - Standard Bus  
EZ Configurator

Set DIP switches ON

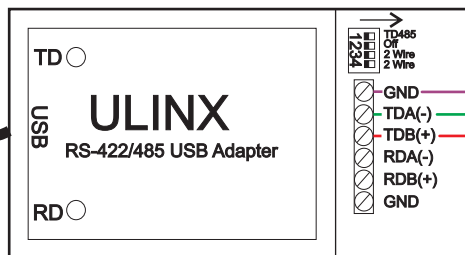

Data format  
38,400 baud  
8 data bits  
no parity  
1 start bit  
1 stop bit


Address 1




Address 2



Connector functions and labels

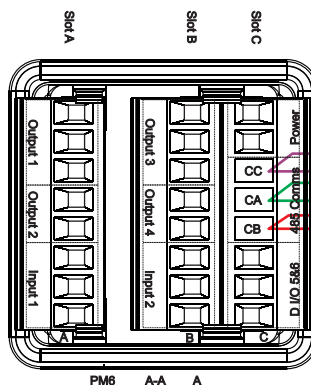

Connector functions and labels

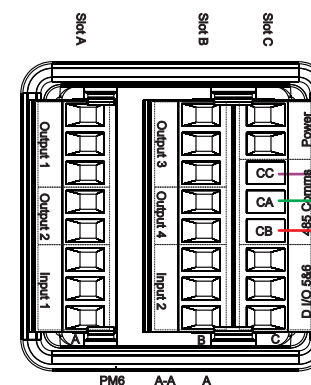

Use twisted pair wires such as Cat 5 cabling.  
Do not route with power carrying conductors.  
Daisy chain wire up to 32 devices.



Watlow EZ-ZONE PM with B&B electronics  
Model ULINX USOPTL4 or USPTL4  
USB to RS-485 Adapter

Example communication wiring diagram

Drawing created 04/02/2015  
components subject to change